




MOUNTING INSTRUCTIONS

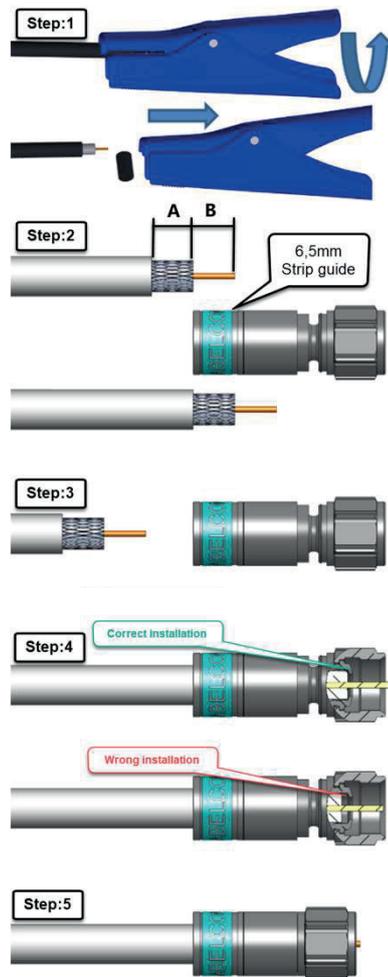

Step 1

- Strip the cable.
- Cut and remove the outer braid and foil. Leave only the first layer of braid (if needed, adjust cable stripper accordingly).
- Clean the cable inner and outer conductor with a conductor cleaner or any other appropriate equipment.
- For your safety and best results Corning Cabelcon's pre-adjusted Cable Stripper is recommended.
- Don't forget - read the enclosed user instruction before using the tool.

Step 2

- Verify stripped dimensions by using cutting guide on the connector.
A = 6,5mm (outer conductor)
B = 6,5-8,0mm (inner conductor)

Step 3

- **DO NOT FOLD BACK THE BRAID**

Step 4

- Push the connector over the cable and allow braid to slide into the front of the connector. Notes; **Do not bend the braid back**

Step 5

- Compress the connector by using the recommended Cabelcon's compression tool

Tools and Accessories

Item no.

COAX COMPRESSIETOOL

800-002

CABELSTRIPPER RG6-S

800-103



Connecting with quality!