




## MOUNTING INSTRUCTIONS

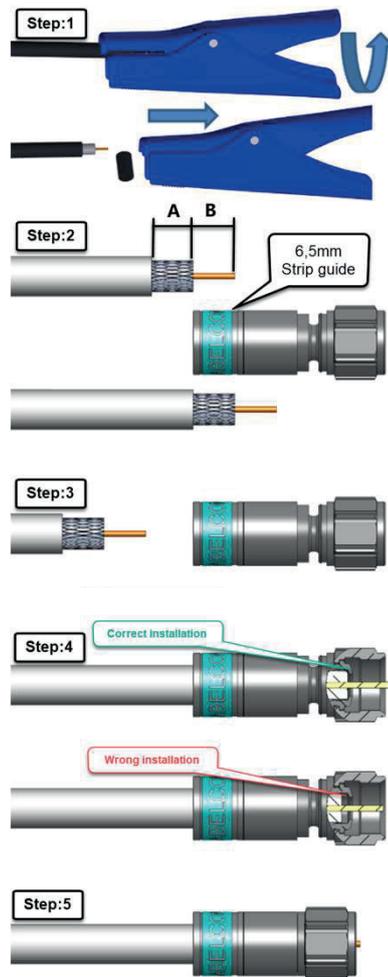

### Step 1

- Strip the cable.
- Cut and remove the outer braid and foil. Leave only the first layer of braid (if needed, adjust cable stripper accordingly).
- Clean the cable inner and outer conductor with a conductor cleaner or any other appropriate equipment.
- For your safety and best results Corning Cabelcon's pre-adjusted Cable Stripper is recommended.
- Don't forget - read the enclosed user instruction before using the tool.

### Step 2

- Verify stripped dimensions by using cutting guide on the connector.  
A = 6,5mm (outer conductor)  
B = 6,5-8,0mm (inner conductor)

### Step 3

- **DO NOT FOLD BACK THE BRAID**

### Step 4

- Push the connector over the cable and allow braid to slide into the front of the connector. Notes; **Do not bend the braid back**

### Step 5

- Compress the connector by using the recommended Cabelcon's compression tool

### Tools and Accessories

### Item no.

COAX COMPRESSIETOOL

800-002

CABELSTRIPPER RG6-S

800-103



Connecting with quality!