




## MOUNTING INSTRUCTIONS


### STEP 1

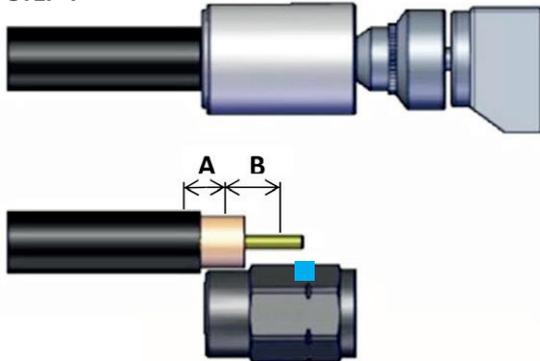


### STEP 2



### STEP 3



### STEP 4

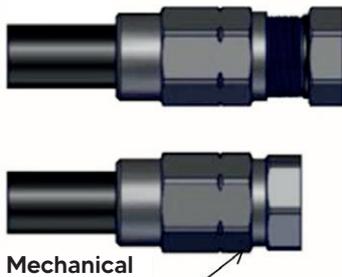

### STEP 1

- Use Cabelcon's Dualstrip tool (item no. 28041475) for proper preparation of the cable.
- Please read the enclosed user instruction before operation the tool.
- After completed strip operation, the prepared cable dimension should be as following:
  - A** = 11,0mm
  - B** = 14,0mm
- If necessary, clean the cable inner conductor with a conductor cleaner item no. 98500903 and the outer conductor with appropriate equipment.

### Step: 2

- Place the back nut over the cable and push it back ward to reach mechanical stop.

### Step: 3

- Push the front end of the connector and the back nut (with cable) together by hand. During this step, the cable's inner conductor slips into the center seizing mechanism of the connector front part.

### Step 4:

- Tighten the back nut by hand as far as possible. Then use two open ended spanners to further tighten the back nut to mechanical stop.
- The connector body must be kept in place during the tightening..



Connecting with quality!